

15. DAILY CLEANING AND MAINTENANCE



INDEX

15. DAILY CLEANING AND MAINTENANCE	15.1
15.1 INTRODUCTION.....	15.2
15.2 CHAMBER CLEANING BRUSH.....	15.2
15.3 TRAY.....	15.3
15.4 FULL WASH.....	15.3
15.5 POURING NOZZLE WASH.....	15.5

TOOLS REQUIRED:



15.1 INTRODUCTION


Before carrying out any exterior cleaning, set the machine to "O" power (I.E. machines switched off).

15.2 CHAMBER CLEANING BRUSH

- 1 Open the door.

- 2 Slide out the grounds drawer.

- 3 Using a brush, clean any coffee buildup or residues from the piston and chamber of the pouring group. Wash any part that need cleaning.

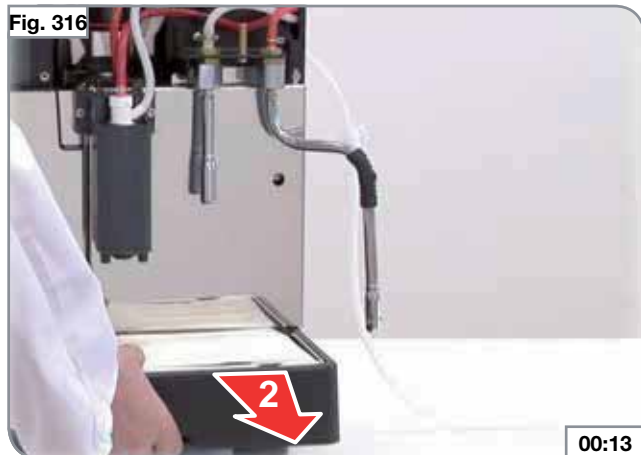

15.3 TRAY

Clean the drip tray with hot water and scrap, using brush if necessary.

Fig. 318



00:28

15.4 FULL WASH

To wash the machine, switch it on and proceed as follows:

- 1 Place a container filled of water alongside.
- 2 Insert the suction tube.
- 3 Add the NUOVA SIMONELLI specific cleaner, pulimilk.
- 4 Press and hold down the "clean" key for about 6 seconds until the display reads:

Fig. 319



00:42

Fig. 320



00:48

- 4 Press and hold down the "clean" key for about 6 seconds until the display reads:

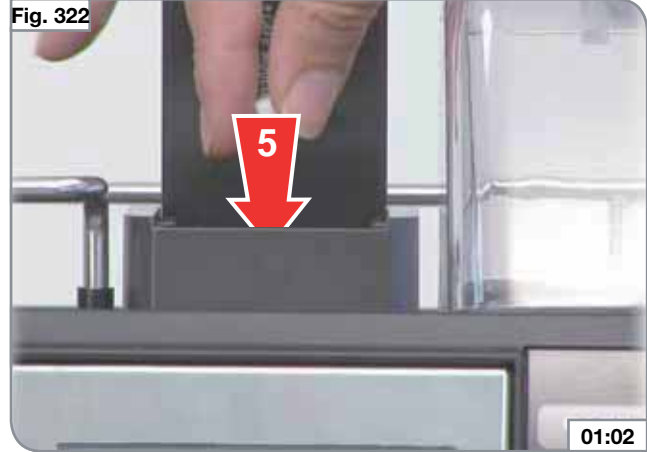


Fig. 321



00:52

- 5 Insert the NUOVA SIMONELLI detergent tab, polycaff, inside the pouring chamber.



- 6 Press the "clean" button, the display will show:




The dose keys are disabled during washing.



- 7 At the end of the wash cycle, the display shows:



- 8 Place a container of clean water and press clean .



- 9 The machine will carry out a rinse cycle and the display shows:




- 10 After the washing cycle is finished, the machine will return to the state:




15.5 POURING NOZZLE WASH

To access the pouring nozzle, the service engineer will need to:

- 1 Switch off the machine.
- 2 Open the door.
- 3 Remove the nozzle from above.

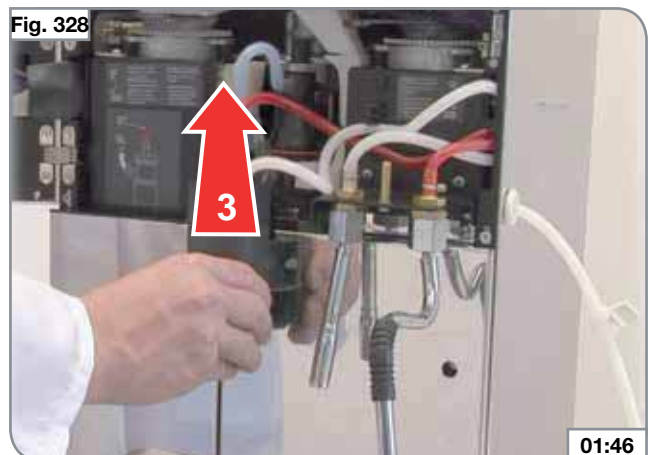

- 4 Slide out the milk frother and pull out the coffee outlet cup and remove it.

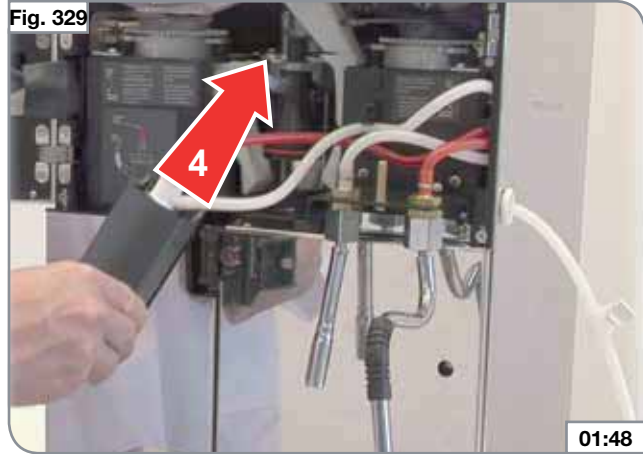

- 5 Then divide the cappuccino maker in four parts and wash them all carefully in cold water.



- 6 To refit the parts, follow the instructions on the back of the control panel.

